

# Channels XT10/30

## 8+8 PMR446

Channel	On Display	Frequency	Tone	CTCSS
1	P1	446.00625		
2	P2	446.01875		
3	P3	446.03125		
4	P4	446.04375		
5	P5	446.05625		
6	P6	446.06875		
7	P7	446.08125		
8	P8	446.09375		
9	09	446.00625	114.8	CTCSS
10	10	446.01875	114.8	CTCSS
11	11	446.03125	114.8	CTCSS
12	12	446.04375	114.8	CTCSS
13	13	446.05625	114.8	CTCSS
14	14	446.06875	114.8	CTCSS
15	15	446.08125	114.8	CTCSS
16	16	446.09375	114.8	CTCSS

## CTCSS TONE TABLE: 38 tones

N°	FREQ. (Hz)	N°	FREQ. (Hz)	N°	FREQ.(Hz)
01	67.0	14	107.2	27	167.9
02	71.9	15	110.9	28	173.8
03	74.4	16	114.8	29	179.9
04	77.0	17	118.8	30	186.2
05	79.7	18	123.0	31	192.8
06	82.5	19	127.3	32	203.5
07	85.4	20	131.8	33	210.7
08	88.5	21	136.5	34	218.1
09	91.5	22	141.3	35	225.7
10	94.8	23	146.2	36	233.6
11	97.4	24	151.4	37	241.8
12	100.0	25	156.7	38	250.3
13	103.5	26	162.2		